


Interface Switch Instructions

1

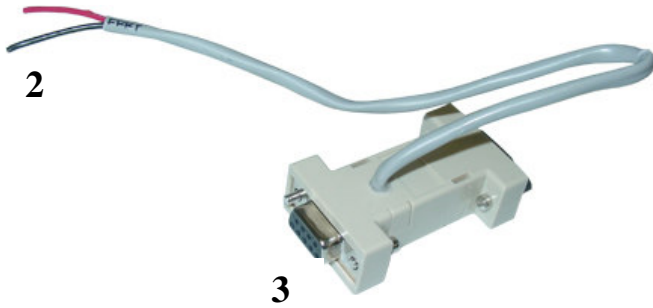

1. **Red Wire**- Attaches to a 12 volt implement switch (when 12 volts is received on this, Site Mate and/or Guide Mate will log data).
2. **Black Wire**- Connects to ground.
3. **Site Mate Connection**- This serial port must be connected to the Pocket PC (via iPAQ-to-GPS cable or RAM Mount), TitanRT, TitanRH, or laptop.
4. **GPS Connection (optional)**- If using an external GPS, such as a Raven receiver, this serial port will be used for incoming GPS. If using a CF (compact flash) GPS, this port is not needed.

Site Mate Software Setup for the Interface Switch



Site Mate Setup for CF (compact flash) or Bluetooth GPS

- 1) Open Site Mate
- 2) Select the “**Configure Tab**” and find the “**Advanced**” option.
- 3) Under the “**Advanced**” option, select “**Advanced Logging Options**.”
- 4) Choose the checkbox labeled “**Enable Implement Switch**”. Once selected make sure the “**Comm Port**” button is activated. You will also need to choose **Com1**.
- 5) Click OK.



Site Mate Setup for external GPS Receiver (using #4)

- 1) Open Site Mate
- 2) Select the “**Configure Tab**” and find the “**Advanced**” option.
- 3) Under the “**Advanced**” option, select “**Advanced Logging Options**.”
- 4) Choose the checkbox labeled “**Enable Implement Switch**”. Once selected make sure the **IFB** button is activated.
- 5) Click OK.

Farm Works Software
6795 S. State Rd 1
P.O. Box 250
Hamilton, IN 46742

Support 260-488-3492
Fax: 260-488-3737
Email: farmwork@farmworks.com
Web: www.farmworks.com

